





Cooler Master Limited




Installation Guide

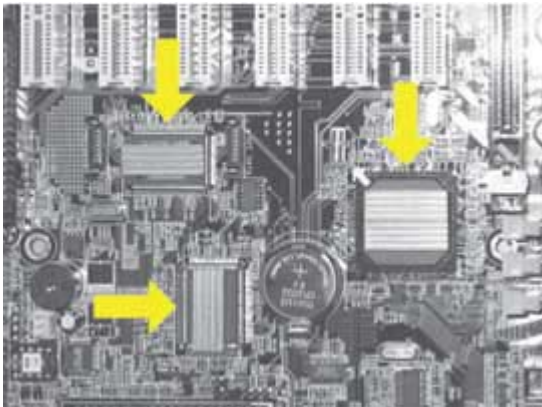

1. Check the physical dimension of the RAM chip. Foot print has to be equal or larger than (length) 22 mm, (width) 8 mm, (height) 6 mm.

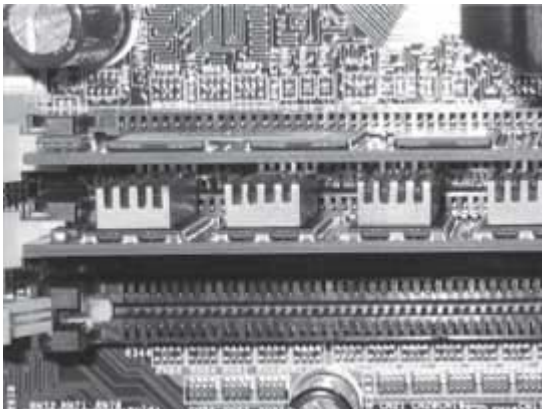

2. Remove thermal conductive double-sided tape from the heat sink.

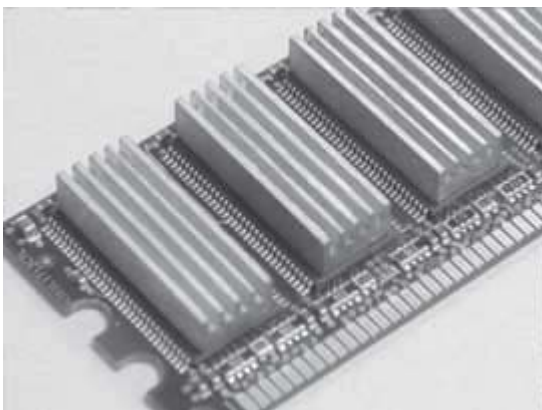

3. Stick the heat sink onto the center of the chip.